

# POLYVISION®

A Steelcase Company

## D & N SERIES TABLE & BENCH POCKETS




### **SUGGESTED INSTALLATION INSTRUCTIONS FOR TABLE & BENCH POCKETS**

Note: Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

Proper pocket installation is essential for successful Table & Bench operation.

1. Verify upon receipt that pockets are free from freight damage.
2. Verify the wall dimensions to insure opening will accept the pockets.
3. Set the pocket in position making sure it is plumb, true & level.
4. When installing flange pocket, a minimum space of  $\frac{3}{8}$ " must be provided between the pocket head panel and the head of the wall recess. This space allows the safety catch bolt on the tables and benches to protrude through the slot in the top of the pocket. The clearance allows the locking mechanism to work freely.
5. Pocket sill must be installed flush with floor. Do not lay floor covering over sill.
6. Care must be taken when installing the pocket to ensure that the table and benches work properly. The table and bench pocket compartments must be held to within plus or minus  $\frac{1}{8}$ ".
7. Attachment to the floor: Secure the sill to the floor using all the holes dimensions provided by the manufacturer. Use lead anchors with truss head screws in the concrete floor.
8. Attachment to the wall: Using pre-drilled holes at 5' high above the finish floor attach pocket to the wall using suitable anchors.

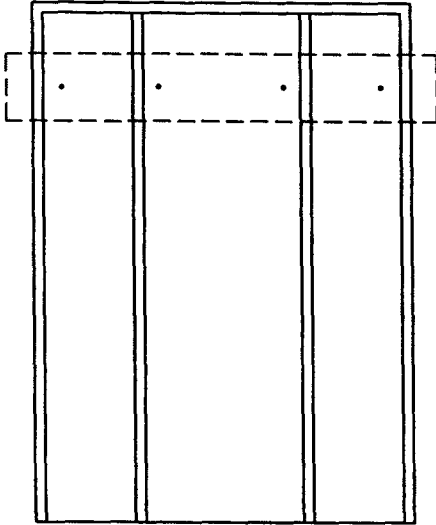

*Indoff*

140 WEST WYND TERRACE  
MIDDLETOWN, CT 06457  
(860) 632-2026  
FAX (860) 632-2028  
www.ahutton.com

CHECK US OUT ONLINE AT: