
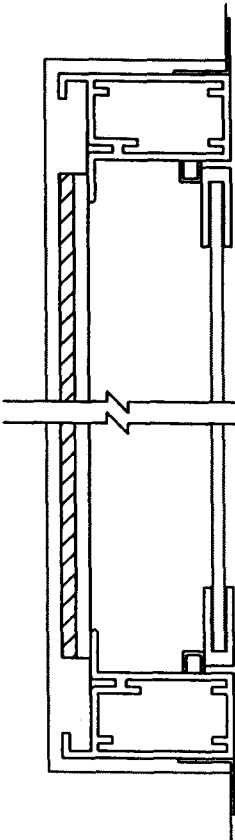


# POLYVISION

A Steelcase Company

## RECESSED MOUNT SBC & HBC

### BULLETIN & DIRECTORY CASES

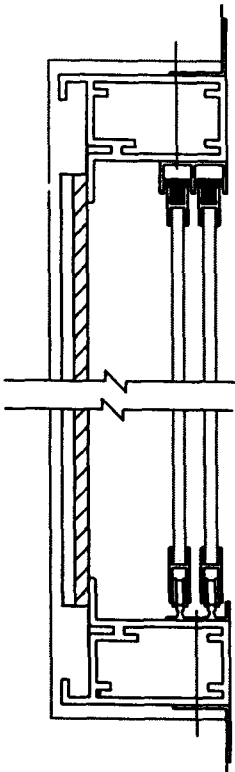

### **SUGGESTED INSTALLATION INSTRUCTIONS FOR RECESSED BULLETIN & DIRECTORY CASES**

Note: Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

1. Lay case down on a flat surface and open doors on hinged unit.
2. Drill four (4)  $\frac{1}{4}$ " mounting holes, one (1) each through housing at horizontal or vertical sections.
3. Install case into recessed masonry opening and shim if necessary.
4. Anchor and secure with suitable anchors into each corner anchor hole through rawl plugs and into the wall.
5. For SBC unit: Insert sliding doors by pushing the top of the door into the top track and then setting the bottom of the door into the bottom track.

*Indoff*

140 WEST WYND TERRACE  
MIDDLETOWN, CT 06457  
(860) 632-2026  
FAX (860) 632-2028  
[www.ahutton.com](http://www.ahutton.com)

CHECK US OUT ONLINE AT: