

POLYVISION®

A Steelcase Company



155 SERIES

DRY MARKERBOARD
CHALKBOARD AND TACKBOARD

SUGGESTED INSTALLATION INSTRUCTIONS FOR 155 SERIES MARKER, CHALK & TACK BOARDS

Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

1. Verify sizes, color & quantity of units delivered with units ordered. Contact the dealer or sales office where purchased to report any discrepancies.
2. Determine locations and mounting height above finish floor (AFF). Level and strike a chalkline at this point.
3. Fasten AH-1 mounting clips to wall with suitable anchors. Anchor clips at center of slot and secure firmly so the bottom edge of clip lines up with chalkline. Set clips 3" from each end and 16" O.C., 24" O.C. max.
4. From bottom of chalkline, measure a line equal to the height of the unit and level and strike a chalkline at this point.
5. Fasten AH-1 clips to wall with suitable anchors. The clips along the top should be positioned so that the top edge is approximately $\frac{1}{2}$ " above the chalkline and can be tapped down onto the top frame of the board.
6. Apply egg-sized gobs of manufacturers recommended Henry's #237 adhesive at 16" centers in field area of panel.
7. Lift unit in place on bottom clips and press board firmly to the wall to make contact with adhesive.
8. Tap top AH-1 mounting clips downward until it touches the top of the trim.
9. Screw $\frac{1}{2}$ " long #8 tek screws up through holes in bottom clips and down through holes in top clips and through trim members.
10. Inspect writing surface for protective polyfilm. Remove if present. Wash all markerboards and chalkboards prior to use.

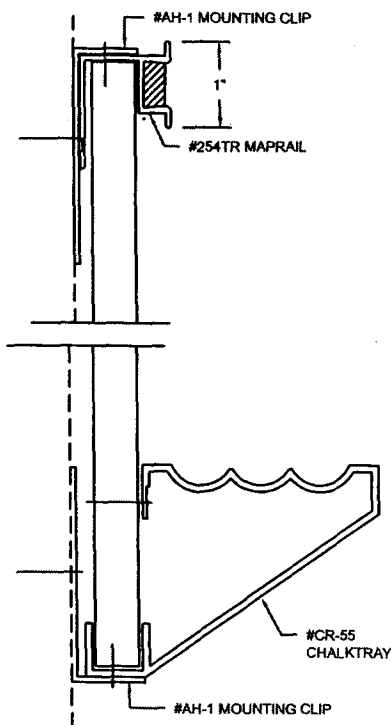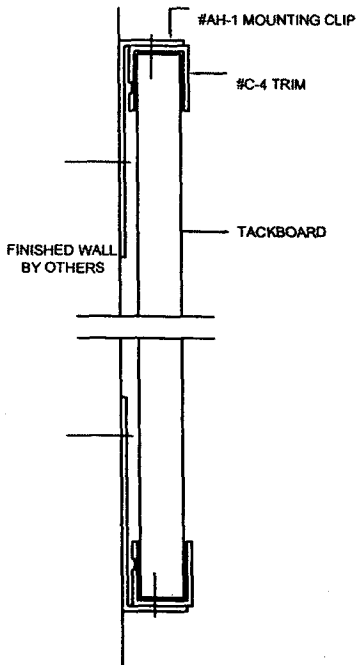

Indoff

140 WEST WYND TERRACE
MIDDLETOWN, CT 06457

(860) 632-2026

FAX (860) 632-2028

www.ahutton.com

CHECK US OUT ONLINE AT: