

# POLYVISION

A Steelcase Company


## 6500 SERIES

DRY MARKERBOARD  
CHALKBOARD OR TACKBOARD

### SUGGESTED INSTALLATION INSTRUCTIONS FOR 6500 SERIES

Note: Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

1. Verify sizes, colors & quantity of units delivered with units ordered. Contact the dealer or sales office where purchased to report any discrepancies.
2. Determine locations and mounting height above finish floor (AFF). Level and strike a chalkline at this point.
3. Verify location of 30t hanger bar on back of board & locate or determine position of HR-16 hanger bar.
4. Fasten HR-16 hanger bar to wall with suitable anchors. Position 3" from end of board.
5. Lift unit onto wall mounted hanger bars.
6. Inspect writing surface of markerboards and chalkboards for protective polyfilm. Remove if present. Wash all markerboards and chalkboards prior to use.

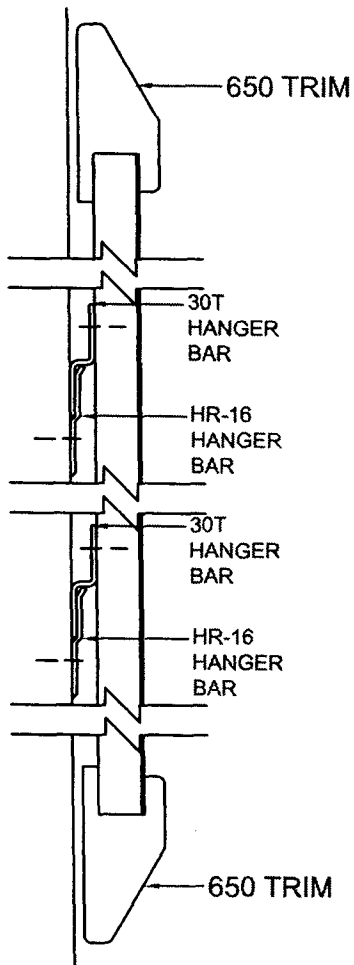

*Indoff*

140 WEST WYND TERRACE  
MIDDLETOWN, CT 06457  
(860) 632-2026  
FAX (860) 632-2028  
[www.ahutton.com](http://www.ahutton.com)

CHECK US OUT ONLINE AT: