



800 SERIES

DRY MARKERBOARD
CHALKBOARD OR TACKBOARD

SUGGESTED INSTALLATION INSTRUCTIONS FOR 800 SERIES MARKER, CHALK & TACK BOARDS

Note: Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

1. Verify sizes, color & quantity of units delivered with units ordered. Contact the dealer or sales office where purchased to report any discrepancies.
2. Determine locations and mounting height above finish floor (AFF). Level and strike chalkline at this point.
3. Cut #51 ground to corresponding panel size plus $\frac{1}{4}$ " for horizontal members. For vertical members, cut 1" less than panel height.
4. Locate bottom ground, based on mounting height from floor. Position ground center point $\frac{1}{4}$ " below this point for chalktray on chalkboards/markerboards and 1" up from this point for tackboards.
5. Position ground on wall and drill $\frac{1}{4}$ " holes through ground and through wall @ 16" or 24" O.C. On sheetrock walls, put fasteners @ locations of studs and attach grounds with suitable anchors. Level ground & shim as necessary. Refer to drawing for proper ground attachment. For units over 12'-0", cut extension sections of grounds.
6. Determine height placement of top ground member based on panel height. Measure up from top flat edge of bottom ground and mark level line equal to $\frac{1}{4}$ " greater than panel height.
7. Locate vertical ground members and repeat steps #5 and #6.
8. Apply egg-sized amounts of PolyVision #237 adhesive @ 16" centers in mounting area of panels.
9. Set bottom of panel into #51 ground and press panel onto wall to make contact with adhesive. For sectional units of markerboards/chalkboards, insert metal spline in vertical edge groove and connect panels into frame.

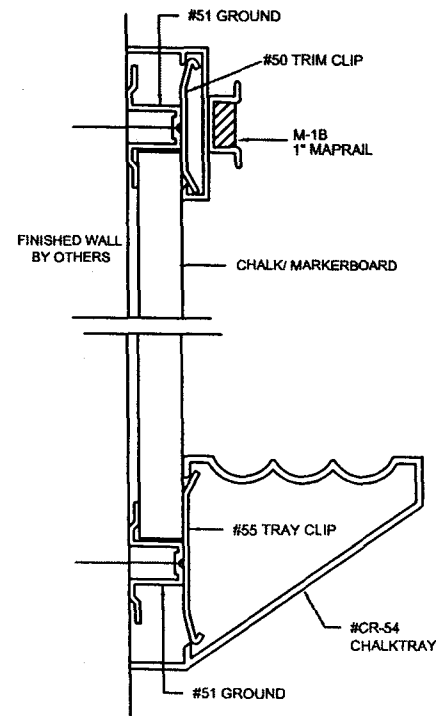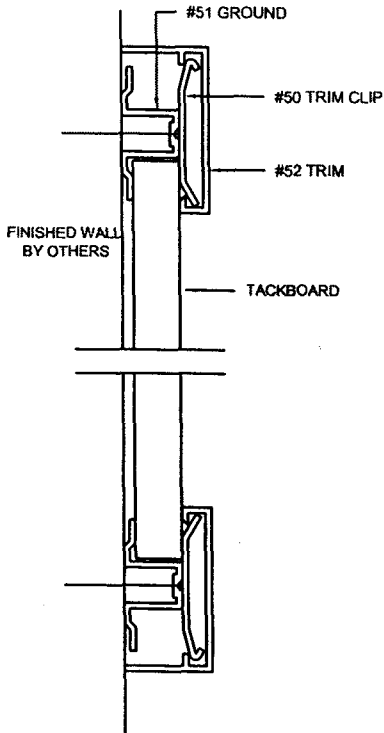

Indoff

140 WEST WYND TERRACE
MIDDLETOWN, CT 06457

(860) 632-2026
FAX (860) 632-2028

www.ahutton.com