


POLYVISION®

A Steelcase Company

1/4" TACKABLE CORK WALL

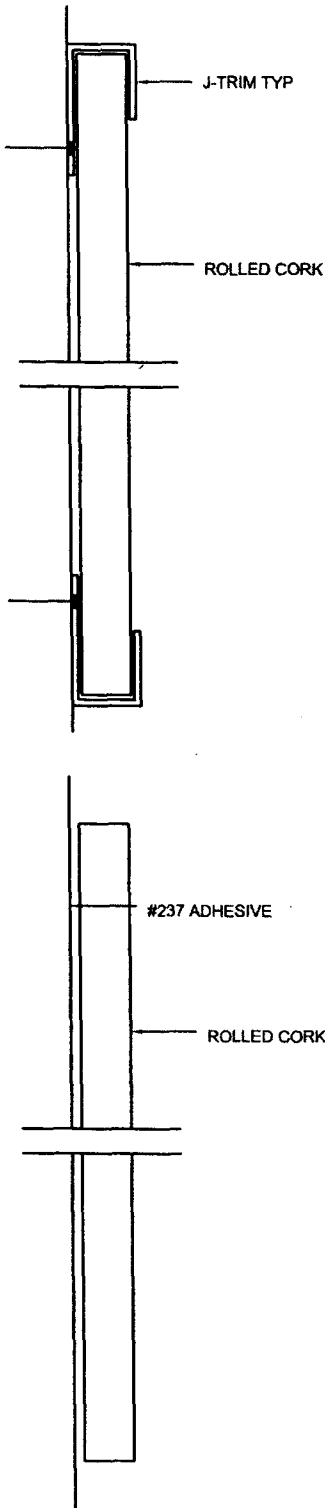

SUGGESTED INSTALLATION INSTRUCTIONS FOR TACKABLE CORK WALL

Note: Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

Note: Allow 24-48 hours for product to acclimate to building temperature before starting installation.

1. Field measure to confirm proper panel size.

For panels without J-trim: Proceed to Note #3.

2. Panels requiring J-trim: Fasten J-trim to wall with suitable anchors, if on drywall anchor into studs 16" or 24" on center.

3. Manufacturer strongly suggests back rolling cork a minimum of 30 minutes or a maximum of 24 hours prior to installation to relieve rolled cork memory.

4. Trowel linoleum paste adhesive to the wall surface. By spreading wall with trowel in area to receive cork.

5. Set cork in place and apply pressure to cork, in order to adhere, with the use of a wall roller (repeat as necessary).

6. Repeat step #5 and #6 to place the next cork section in place. Push next piece as close as possible to avoid a noticeable gap.

7. Clean panel surfaces as needed for use.

Indoff

140 WEST WYND TERRACE
MIDDLETOWN, CT 06457

(860) 632-2026
FAX (860) 632-2028
www.ahutton.com

CHECK US OUT ONLINE AT: