
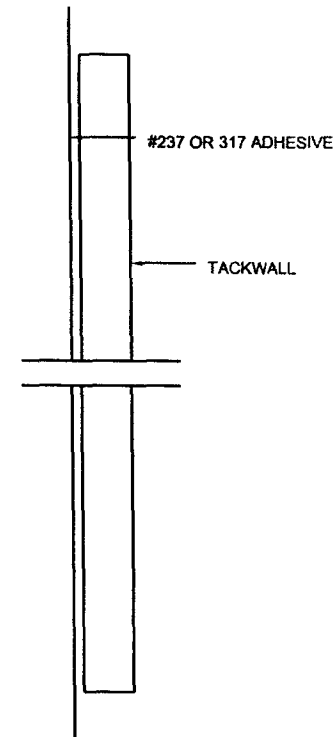


TACKABLE WALL

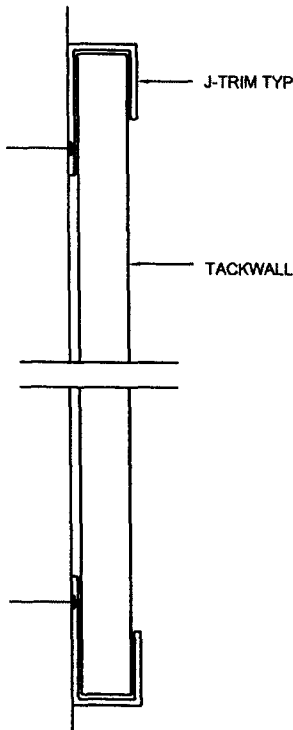

SUGGESTED INSTALLATION INSTRUCTIONS FOR TACKABLE WALL

Note: Complete installation hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

Note: Allow 24-48 hours for product to acclimate to building temperature before installation.

1. Field measure to confirm proper panel size.
2. Deliver factory built panels to jobsite.

For panels without J-trim: Proceed to Note #4.

3. Panels requiring J-trim: Fasten J-trim to wall with suitable anchors, if on drywall anchor into studs 16" or 24" on center.
4. Apply egg-sized gobs of manufacturers recommended Henry's #317 or #237 adhesive to the back of the panel. (Or if provided, use eyelets and screws 24" O.C. around perimeter of board)
5. For panels with H-bar at joints, slide H-Bar to the edge of panel and screw exposed leg of H-bar with suitable anchors, otherwise proceed to next step.
6. Repeat step #5 and push next panel as close as possible to the next and apply slight pressure to the panel in order to adhere.
7. Clean panel surfaces as needed to use surface.

Indoff

140 WEST WYND TERRACE
MIDDLETOWN, CT 06457
(860) 632-2026
FAX (860) 632-2028
www.ahutton.com